## Freedom ICX-2 Keyboard Quick Start Guide



Table Of Contents	Page
Keyboard hardware	2
Connecting to an iPhone/iPad/iPod Touch	3
Connecting to Samsung Galaxy S and Galaxy Tab	7
Connecting to a Windows Mobile Pocket PC	9
Connecting to a Windows based Desktop/Laptop/Netbook/Tablet.	10
Trouble shooting	11

Your Freedom ICX-2 Keyboard

Thank you for purchasing the Freedom i-Connex Keyboard. Before we proceed with installing the keyboard on your phone/PDA/Pocket PC let's take a brief look at the hardware.

1) Bluetooth Pairing Reset:
Used for putting the keyboard into pairing mode when it is first paired.

#### 2) Hinge Lock:

Slide the hinge locking mechanism to the right to lock the hinge in place and stop the keyboard from folding. Slide it to the left to unlock the hinge and fold the keyboard. Please ensure that the slide mechanism is pushed fully to the left (unlocked) position before attempting to close the keyboard.

3) Pull out easel:
The folding device easel pulls out completely from the keyboard to hold your phone/PDA/Pocket PC.

AA batteries will give up to 80 hours of continuous operation before they need to be replaced.

The keyboard will automatically go into power saving mode (switch itself off) if it is left turned on for 15 minutes without any input. To take the keyboard out of power saving mode simply switch the keyboard off and then switch it back on again

### 5) Bluetooth Indicator Light:

Flashes rapidly when in pairing/waiting to connect mode (once per second). Flashes slowly when connected (once every 8 seconds).

**6) Power Warning Light:** Flashes when batteries need to be replaced.

#### 7) Power Switch:

Switches the keyboard on and off.

#### 8) SPP/HID Mode Switch:

This has no function on the i-Connex keyboard. The i-Connex keyboard only uses HID mode.

#### 9) FN (Function) Key:

This key is used in combination with other keys on the keyboard to emulate buttons on the phone or to quick launch applications. Full function key combinations for each device can be found in their relevant installation instructions. Please note that FN key combinations do not work on all devices.

These keys give quick access to commonly used controls such as volume, media playback and action button press.

## Connecting to an iPhone/iPad/iPod touch.

Please note that your device must be running the 4.0 operating system for the keyboard to be able to connect.

## Pairing the Keyboard

- 1) Turn the keyboard on and press the recessed pairing button down for 5 seconds.
- 2) On your iPhone, iPad or iPod touch, go to "Settings". Then from the settings screen select "General".





3) Now under the "General" settings select "Bluetooth". Once your device finds the keyboard select "Freedom ICX-2 Keyboard" from the list.





3

4) Your device will now give you a 4 digit passkey. Enter this key onto the Freedom i-Connex and press enter to complete the pairing (also on the Freedom ICX-2).



5) Now go back to the "Settings" page and select "Keyboard".



6) Select "International Keyboards". Now select "QWERTY" and "US International – PC".





*Optional:* You can also add additional keyboard layouts for other language inputs. Select the "International Keyboards" button again and then select the "Add New Keyboard" option.

7) Now your Freedom ICX-2 keyboard will be connected. From this point forward you just need to switch the keyboard on and off when you need it. It will automatically reconnect when switched on.

## Shortcut Keys for the iPhone and iPad

Switching input language:
If you have defined more than one input language (Page 5, step 6) you can quickly switch between them using the keyboard shortcut combination below.

- Press and hold the "Menu" key.
   Press the "Space Bar" to bring up the input language selection menu.
   Press the "Space Bar" to toggle between input languages.
   When the desired input language is selected release the "Menu" key.

Additional Shortcut Keys
Please note that some programs may not recognise all shortcut keys.

riease note that some programs may not recognise an shortcut keys.		
Shortcut key combination	Effect	
Menu+C	Copy Selected Text	
Menu+V	Paste Text	
Menu+Z	Undo	
Menu+X	Cut Selected text	
Shift+Cursor keys	Highlight/Select Text	
Menu+A	Select all	
Menu+Cursor Up	Top of Page	
Menu+Cursor Down	Bottom Of Page	
Double press "Home" button	Open Task Switcher	
Hold "Home" button	Open Voice Control	
Press "Home" button	Return to Home Screen	
Press "Home" button when on Home	Switch to "Search" bar.	
Screen.		

## Connecting to Samsung Galaxy S and Galaxy Tab (and other Android devices which have built in HID support).

## Paring the keyboard.

1) Turn the keyboard on and press the recessed pairing button down for 5 seconds.

2) On your Android Device, go to "Settings". Then from the settings screen select "Wireless and network".






3) Now select "Bluetooth Settings". Once your device finds the keyboard select "Freedom ICX-2" from the list.



7

4) Your device will now give you a 6 digit passkey. Enter this key onto the Freedom ICX-2 and press enter to complete the pairing (also on the Freedom ICX-2).

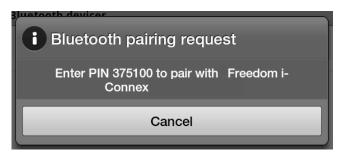

5) Now your Freedom ICX-2 Keyboard will be connected. From this point forward you just need to switch the Freedom ICX-2 on and off when you need it. It will automatically reconnect when switched on.

## Connecting to a Windows Mobile device.

#### **Phones Using HTC Touch Flow interface:**

- 1) Turn the keyboard on and press the recessed pairing button down for 5 seconds.
- 2) Click on Start.
- 3) Click on "Settings" icon.
- 4) Click on "All Settings" from the left hand menu.
- 5) Click on the "Bluetooth" icon.
- **6)** Click on "Menu" and select "Add Device". The phone will now search for nearby Bluetooth devices.
- 7) Once it has finished searching select "Freedom ICX-2" from the list.
- **8)** The phone will now give you a passkey. Enter this passkey onto the keyboard and press enter (also on the keyboard) to complete the pairing.
- **9)** Now your Freedom ICX-2 keyboard will be connected. From this point forward you just need to switch the keyboard on and off when you need it. It will automatically reconnect when switched on.

#### Phones Using standard Windows Mobile Interface:

- 1) Turn the keyboard on and press the recessed pairing button down for 5 seconds.
- 2) Click on Start.
- 3) Click on "Settings" icon.
- 4) Click on "Connections" Tab.
- 5) Click on the "Bluetooth" icon.
- **6)** Click on "Menu" and select "Add Device". The phone will now search for nearby Bluetooth devices.
- **7)** Once it has finished searching select "Freedom ICX-2 keyboard" from the list.

## Note the next step can vary depending on your phone (8a or 8b):

- **8a)** The phone will now give you a passkey. Enter this passkey onto the keyboard and press enter (also on the keyboard) to complete the pairing.
- **8b)** The Phone will ask you to enter a passkey. Enter any 4 or 5 digit number you wish and click next. You will then get the "waiting" animation on screen. At this time enter the same number onto the keyboard and press enter (also on the keyboard) to complete the pairing.
- **9)** Now your Freedom ICX-2 keyboard will be connected. From this point forward you just need to switch the keyboard on and off when you need it. It will automatically reconnect when switched on.

## Connecting to a Windows based Desktop/Laptop/Netbook/Tablet.

The process for connecting under Windows differs slightly depending on version. The instructions below are for Windows XP however the process is similar for 2000, Vista and Windows 7.

- 1) Turn the keyboard on and press the recessed pairing button down for 5 seconds.
- 2) Click on Control Panel.
- 3) Go to "Bluetooth Devices".
- 4) Click on Add and follow the onscreen instructions to begin the process.
- **5)** The Computer will now search for nearby Bluetooth devices. Once it has finished select "Freedom ICX-2 Keyboard" from the list.
- 6) When given passkey options select "choose a passkey for me".
- 7) When prompted enter this passkey onto the keyboard and press enter (also on the keyboard).
- **9)** Now your Freedom ICX-2 keyboard will be connected. From this point forward you just need to switch the keyboard on and off when you need it. It will automatically reconnect when switched on.

You may have to change your input language to "US International" for the key mapping to match with what is printed on the keyboard.

#### General Trouble shooting and FAQ.

Q) My device is not seeing the keyboard when I'm trying to pair it.

A) Please ensure the keyboard is turned on and that you have held down the recessed pairing button for at least 5 seconds. Also make sure that the Bluetooth LED on the keyboard is flashing. If the LED is not flashing check the batteries are placed in the correct way and that they are not flat.

# Q) Some of the keys are not matching what is showing on screen. A) The Freedom i-Connect is based on the US International keyboard layout. Some devices will require you to change your input layout settings to US International.

#### Q) Some of the function keys are not working.

A) The Freedom i-Connect is designed to work with multiple devices. Some function keys however are only recognised by certain devices. For example the Email shortcut key and F1-F12 are not recognised by the Apple iPhone/iPad OS and will have no function but they will work with Windows based operating systems.

# For technical support on this product please visit: <a href="http://freedom.helpserve.com">http://freedom.helpserve.com</a>

For the latest product announcements please visit:

www.freedominput.com

## **DECLARATION OF CONFORMITY**

We, Freedom Input Ltd, Jasmine House, 65 Salisbury Road, Dover, Kent, CT16 1EY, United Kingdom, declare under our own responsibility that the product:

#### Freedom ICX-2 Keyboard

Portable, Folding, keyboard for iPhone, iPod Touch, iPad, PDA's, Pocket PC's and Smartphones.

To which this declaration conforms with the relevant standards or other standardizing documents CE & testing reports.

According to the regulations in:

EC Council Directive 1999/5/EC, R&TTE RoHS Directive 2002/95/EC

P/N:FDMK-BT This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference and
   This device must accept any interference received, including interference the my cause undesired operation of the device.

#### FCC RF Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

